

JEEP JL 2018 – 20XX

POD LIGHT MOUNT INSTALLATION INSTRUCTIONS



SAFETY

Know Safety, no injury. Know injury, no safety. ~Author Unknown

If there are any questions, call 1-855-HHTOUGH

- **READ ALL SAFETY INSTRUCTIONS BEFORE INSTALLATION**
 - FOLLOW ALL INSTRUCTIONS FOR PROPER ASSEMBLY
 - WEAR APPROPRIATE EYE PROTECTION
 - EXERCISE CARE WHEN LIFTING COMPONENTS
 - USE APPROPRIATE TORQUE FOR BOLTS
 - BLUE THREAD LOCKING COMPOUND IS RECOMMENDED ON ALL BOLTS

SUGGESTED TORQUE VALUES FOR STEEL GRADE SAE 5 BOLTS


BOLT DIAMETER (INCH)	TREADS PER INCH	TORQUE (POUND-FEET)
1/4	20	7
5/16	18	14
3/8	16	25
7/16	14	40
1/2	13	60
9/16	12	88
5/8	11	120
3/4	10	200
7/8	9	302
1	8	466



600-56-0801

I. PARTS LIST

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	601-56-4444	LEFT POD
2	1	601-56-4445	RIGHT POD
3	1	60K-56-0164	HARDWARE KIT #164

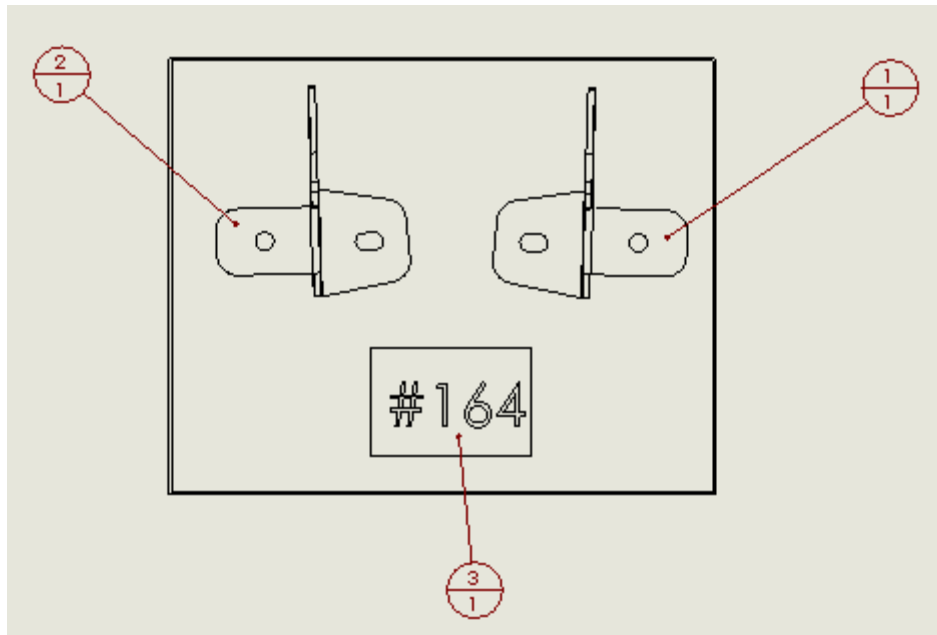

REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT.

If there are any questions, call 1-855 HHTOUGH or email HHORDERS@hammerheadarmor.com

II. TOOL LIST


1. Basic Tool Kit
2. Torx 40
3. Torx 30
4. Torx 55



600-56-0801

III. POD LIGHT MOUNT INSTALLATION

1. Remove rear cowl bolt with a torx 40, and the windshield hinge bolt with a torx 55 from one side of the Jeep.
2. Place the provided nylon spacer in the rear cowl bolt location. Using the Torx 30 thread on the provided 6mm bolt and black washer to attach the Pod Light Mount. Do not tighten yet.
3. Using the Torx 55 reinstall the OE hood hinge bolt. Do not tighten yet.
4. Tighten both down to spec.
5. Install your pods according to their instructions. Repeat for the other side.

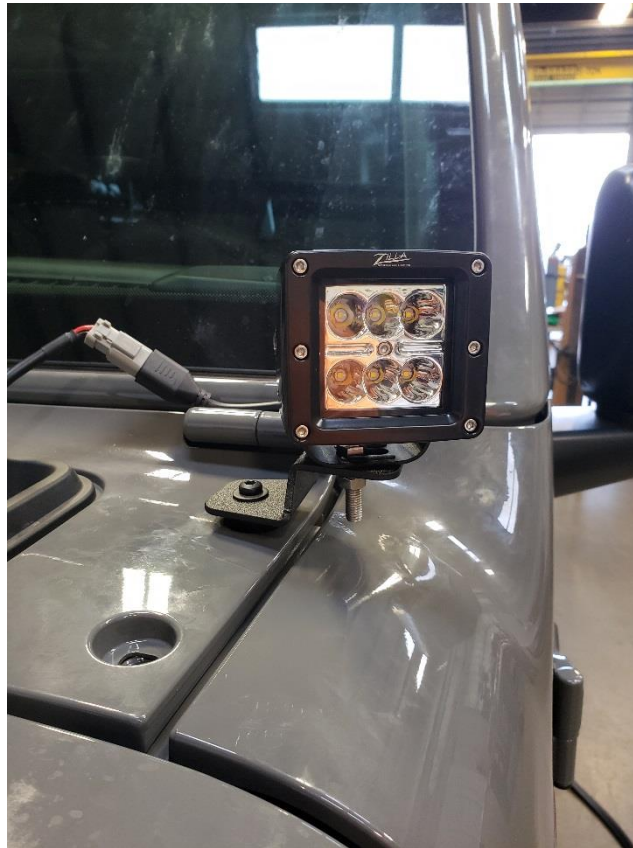

**Congratulations! Your Installation is now complete.
Thank You for your purchase!**