

2018 – 20XX JEEP JL

FRONT SKID PLATE INSTALLATION INSTRUCTIONS



SAFETY

Know Safety, no injury. Know injury, no safety. ~Author Unknown

If there are any questions, call 1-855-HHTOUGH


- **READ ALL SAFETY INSTRUCTIONS BEFORE INSTALLATION**
 - FOLLOW ALL INSTRUCTIONS FOR PROPER ASSEMBLY
 - WEAR APPROPRIATE EYE PROTECTION
 - EXERCISE CARE WHEN LIFTING COMPONENTS
 - USE APPROPRIATE TORQUE FOR BOLTS
 - BLUE THREAD LOCKING COMPOUND IS RECOMMENDED ON ALL BOLTS

SUGGESTED TORQUE VALUES FOR STEEL GRADE SAE 5 BOLTS


BOLT DIAMETER (INCH)	TREADS PER INCH	TORQUE (POUND-FEET)
1/4	20	7
5/16	18	14
3/8	16	25
7/16	14	40
1/2	13	60
9/16	12	88
5/8	11	120
3/4	10	200
7/8	9	302
1	8	466

I. PARTS LIST

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	60H-56-0051	INSTALL KIT #51
2	1	60P-56-0836	JP JL RAVAGER FRONT SKID

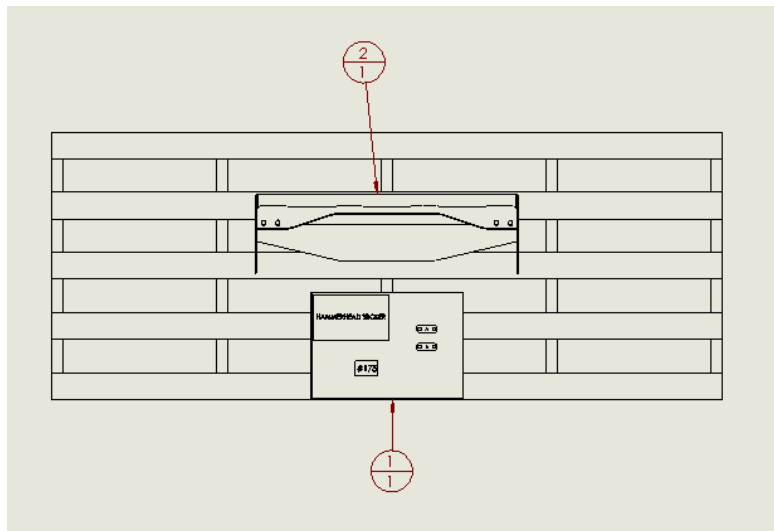

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	409-01-0125	HAMMERHEAD STICKER
2	2	601-56-4493	WELDNUT TAB A
3	1	60K-56-0175	HARDWARE KIT #175

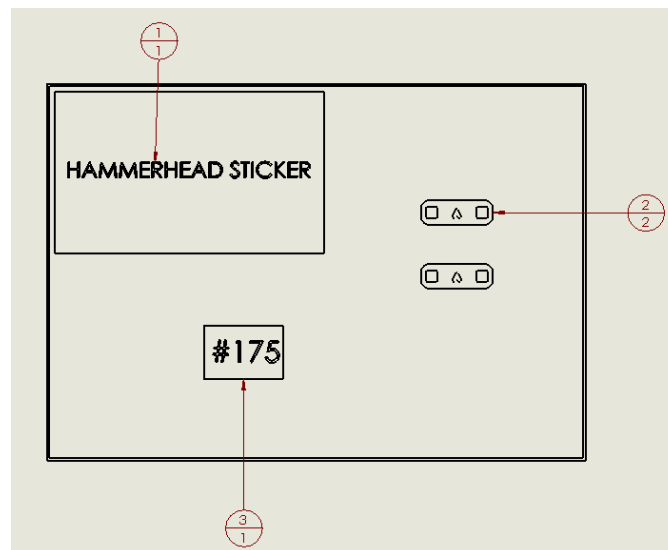

REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT.


If there are any questions, call 1-855 HHTOUGH or email HHORDERS@hammerheadarmor.com

II. TOOL LIST


1. Basic Tool Kit
2. 9/16" socket

III. FRONT SKID PLATE INSTALLATION

1. Place two 3/8" carriage head bolts into weldnut tab A. Place this inside the drop down frame locations and push the bolts through the frame in the indicated locations. Use the provided 3/8" pushnuts to secure the bolts in place. Do this for both sides.

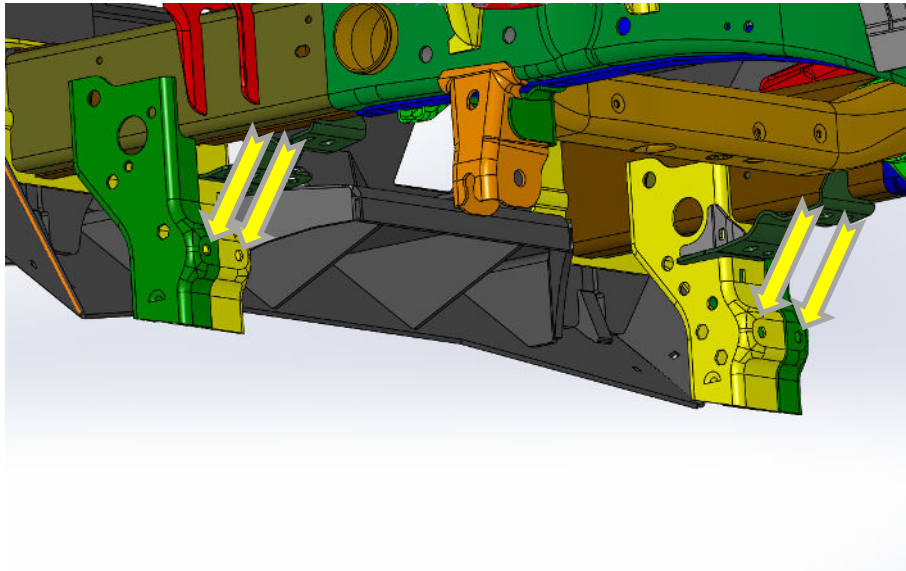

2. Using a 9/16" socket, mount the Front Skid Plate with the provided 3/8" nuts and washers.

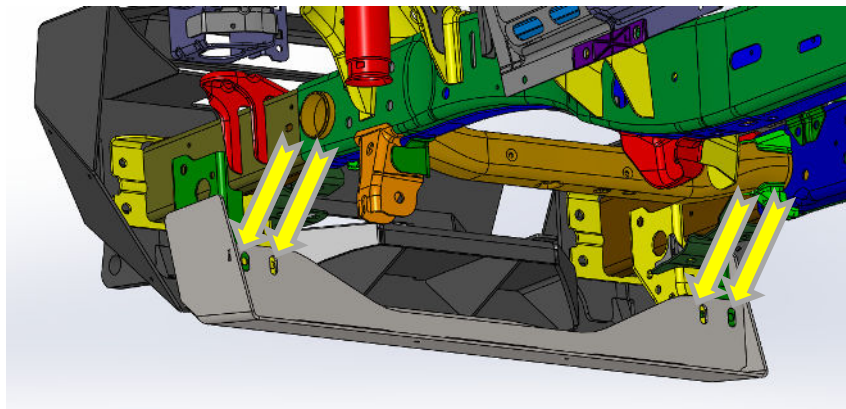

**Congratulations! Your Installation is now complete.
Thank You for your purchase!**