

2010-20XX DODGE 4500-5500 REGULAR CAB – CAB LENGTH

RUNNING BOARD INSTALLATION INSTRUCTIONS



SAFETY

Know safety, no injury. Know injury, no safety. ~Author Unknown

If there are any questions, call 1-855-HHTOUGH

- **READ ALL SAFETY INSTRUCTIONS BEFORE INSTALLATION**
 - FOLLOW ALL INSTRUCTIONS FOR PROPER ASSEMBLY
 - WEAR APPROPRIATE EYE PROTECTION
 - EXERCISE CARE WHEN LIFTING COMPONENTS
 - USE APPROPRIATE TORQUE FOR BOLTS
 - BLUE THREAD LOCKING COMPOUND IS RECOMMENDED ON ALL BOLTS

- SUGGESTED TORQUE VALUES FOR STEEL GRADE SAE 5 BOLTS

BOLT DIAMETER (INCH)	TREADS PER INCH	TORQUE (POUND-FEET)
1/4	20	7
5/16	18	14
3/8	16	25
7/16	14	40
1/2	13	60
9/16	12	88
5/8	11	120
3/4	10	200
7/8	9	302
1	8	466



2010-20XX DODGE 4500-5500 REGULAR CAB

I. PARTS LIST

<u>QUANTITY</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>
1	60P-56-0402	RIGHT RUNNING BOARD
1	60P-56-0403	LEFT RUNNING BOARD

II. TOOL LIST

1. A good friend
2. Basic tool kit
3. 18mm socket


III. VEHICLE PREPARATION

1. Using 18mm socket, remove two cab bolts.

Front



Rear

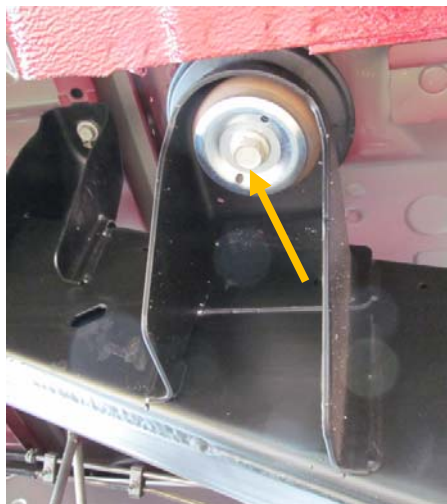




2010-20XX DODGE 4500-5500 REGULAR CAB

IV. **RUNNING BOARD INSTALLATION**

1. Identify the left running board. It will have a bottle opener (arrow) on the left side.

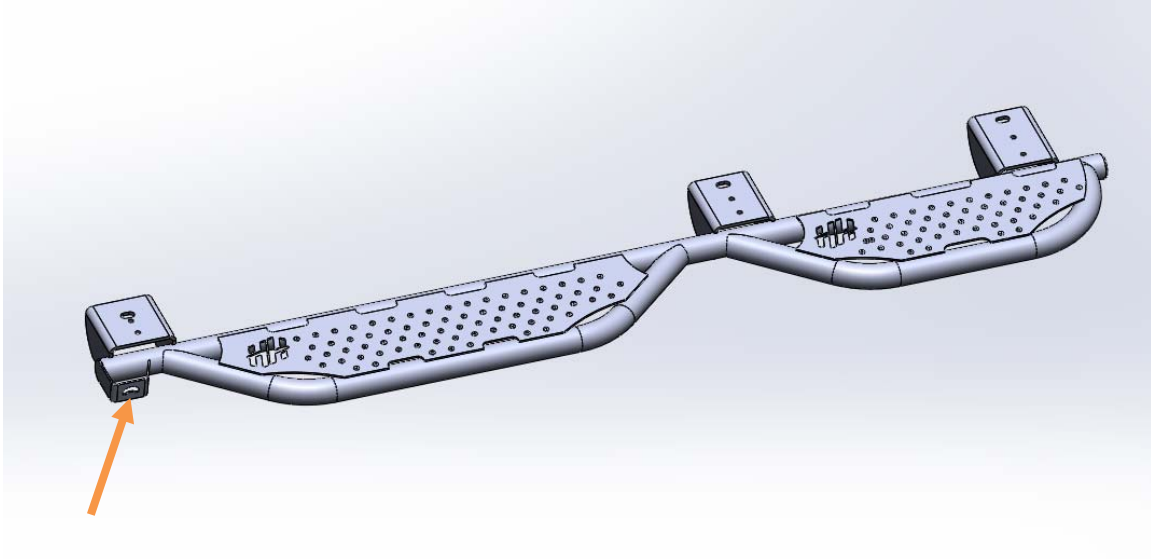

(Picture is for reference only; your running boards may differ.)

2. Place OEM cab bushings/washers on top of Hammerhead running board mounts.
3. Have a good friend help you hold the running board up to the mounts. Install with OEM hardware.
4. Tighten all hardware.
5. Follow the same procedure for the right side of the vehicle.

Congratulations! Your installation is now complete.
Thank you for your purchase.