

1997-2006 JEEP TJ

20" LIGHT BAR HOOD MOUNT INSTALLATION INSTRUCTIONS



SAFETY

Know safety, no injury. Know injury, no safety. ~Author Unknown

If there are any questions, call 1-855-HHTOUGH

- **READ ALL SAFETY INSTRUCTIONS BEFORE INSTALLATION**
 - FOLLOW ALL INSTRUCTIONS FOR PROPER ASSEMBLY
 - WEAR APPROPRIATE EYE PROTECTION
 - EXERCISE CARE WHEN LIFTING COMPONENTS
 - USE APPROPRIATE TORQUE FOR BOLTS
 - BLUE THREAD LOCKING COMPOUND IS RECOMMENDED ON ALL BOLTS

California Proposition 65



WARNING

Cancer and Reproductive Harm

www.P65Warnings.ca.gov

DO NOT PAINT OVER THIS LABEL. REPLACE IF DAMAGED OR LOST


DKB150_00

Suggested Torque Values For Steel Grade 5 Standard Bolts		
BOLT DIAMETER (INCH)	THREADS PER INCH	TORQUE (POUND - FEET)
1/4	20	7
5/16	18	14
3/8	16	25
7/16	14	40
1/2	13	60
9/16	12	88
5/8	11	120
3/4	10	200
7/8	9	302
1	8	466

Suggested Torque Values For Steel Grade 8.8 Metric Bolts		
BOLT DIAMETER (mm)	THREAD PITCH (mm)	TORQUE (POUND-FEET)
6	1.0	7
8	1.25	16
10	1.5	32
12	1.75	55
14	2.0	88
16	2.0	140
18	2.5	195
20	2.5	275
22	2.5	375
24	3.0	475

I. PARTS LIST

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	601-56-2341	LEFT TJ 20" LIGHT BAR HOOD MOUNT
2	1	601-56-2342	RIGHT TJ 20" LIGHT BAR HOOD MOUNT
3	1	60K-56-0084	HARDWARE KIT #84
4	2	601-56-2941	TJ HOOD MOUNT FOAM

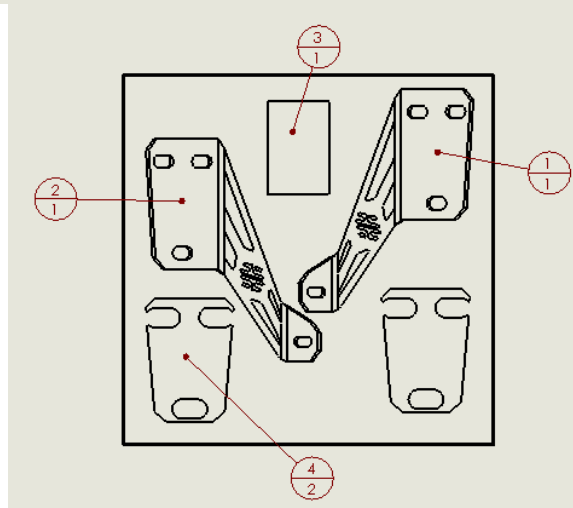

II. TOOL LIST

1. Basic tool set
2. Torx 40 socket

III. REMOVAL OF OEM BOLTS

1. Using a Torx 40 socket remove the 3 bolts from the right hood hinge



IV. INSTALATION OF LIGHT BAR HOOD MOUNT

1. Peel off the sticky cover and place the foam on the bottom of both of both the mounts





2007-2016 Jeep JK

2. Place mount on hood hinge and using a Torx 40 socket bolt on the mount. Do not tighten bolts yet.



3. Repeat for the other side
4. Install 20" light bar according to its instructions



Congratulations! Your hammerhead 20" light bar hood mount installation is now complete.

Thank you for your purchase.